


Section A-A

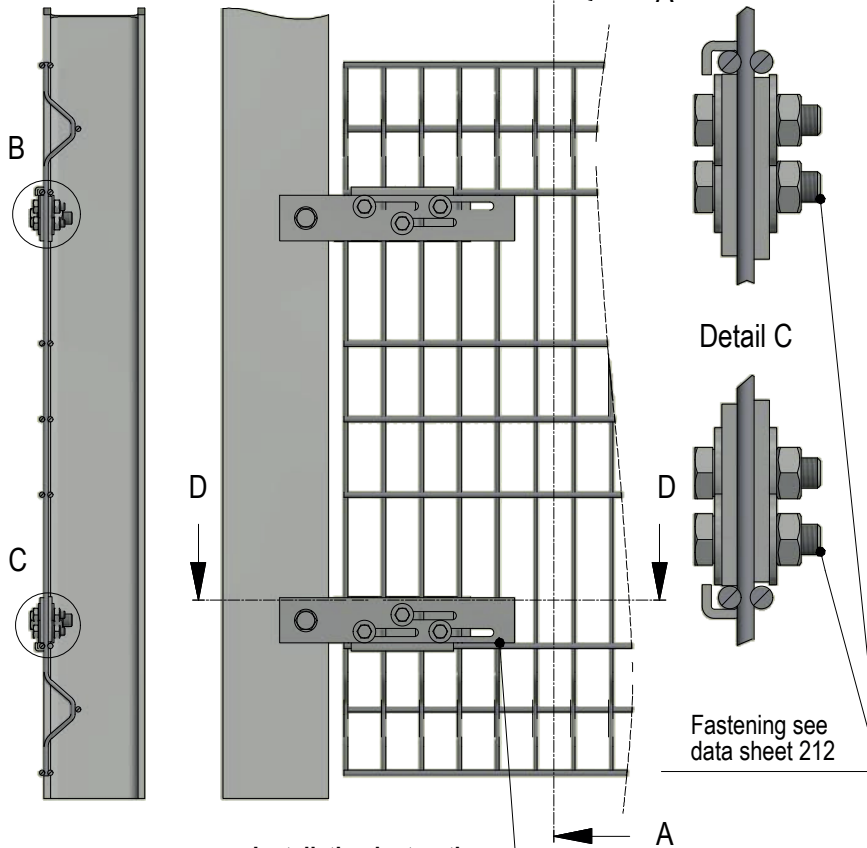

Installation instructions:
 The crest must always be installed starting in the first INTEGRA grid field, so that a max. slipping distance is achieved.

Note:

An extended ramp flange is used when integrating in the ramp incline.

Technical data:

- INTEGRA-pw Fastening flange
- INTEGRA-pw crest
- INTEGRA-pw Counter flange

All bolts must be tightened with a torque of 50 Nm.

Fastening see data sheet 212



German Approval

Section D-D

